 


Touch sensor



AVD-800P / MAP-I200 KEYPAD(eur)

■ Interface Design

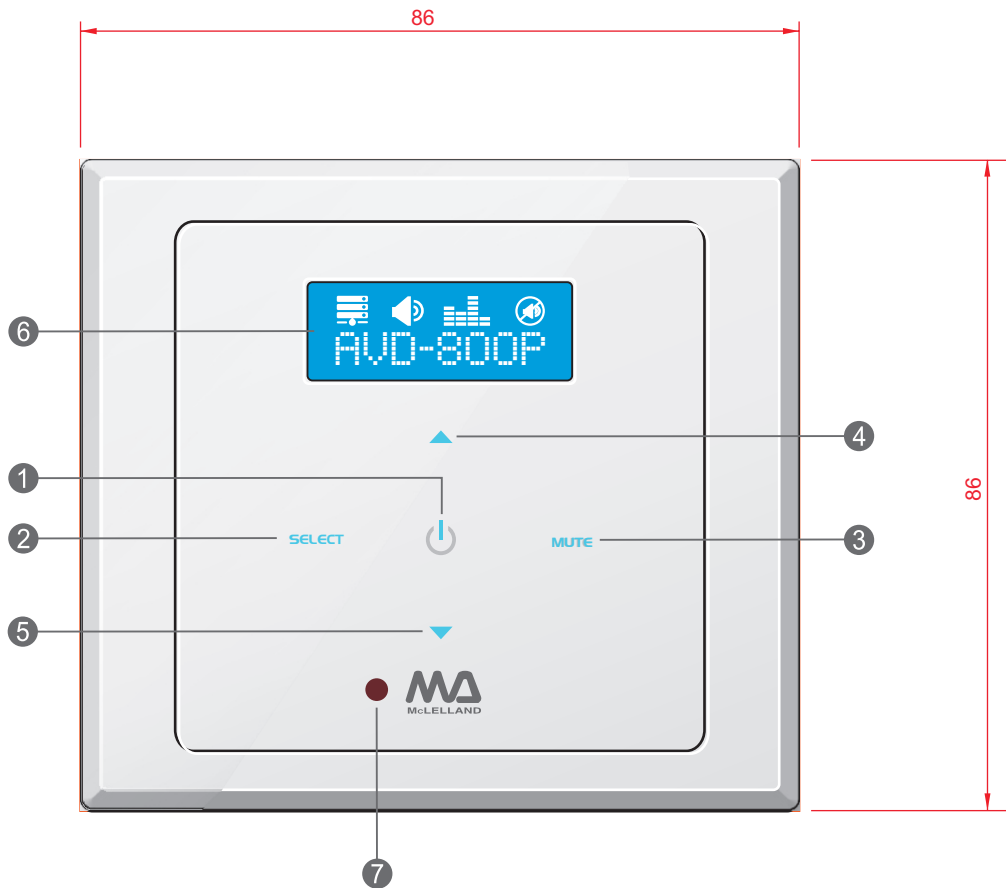


(Unit: mm)

1. POWER Key
2. SELECT Key
3. MUTE Key
4. UP Key
5. DOWN Key
6. LCD Display
7. IR Sensor

Instructions

1 POWER Key- to switch the keypad on and off


When the power is off, touch the "POWER" key to turn the power on, all back lights on (blue), display shows AVD-800P or MAP-1200. When the power is on, touch and hold the "POWER" key for 2 seconds to turn the power off. "POWER" key back light turn into red and all others back lights off.

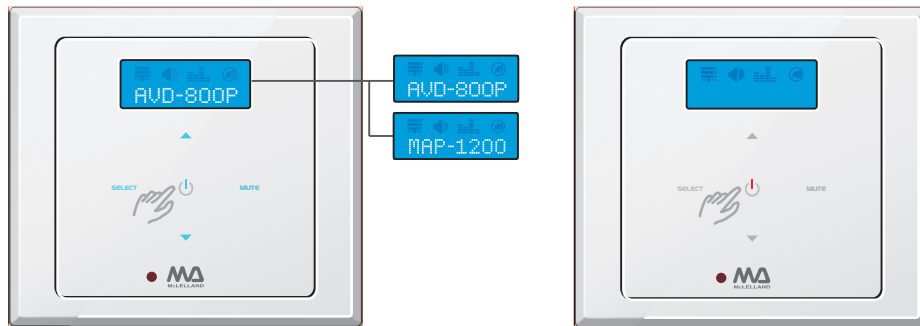


2 SELECT Key


Touch "SELECT" key once, Channel selection, first ICON on the LCD  on, press the "UP", "DOWN" arrow to select channel, LCD display shows CH 1, CH 2,



Touch "SELECT" key again, Volume adjustment, second ICON on the LCD  on, press the "UP", "DOWN" arrow to adjust volume, LCD display shows Vol + "value".


Touch "SELECT" key again, Treble adjustment, third ICON on the LCD  on, press the "UP", "DOWN" arrow to adjust treble, LCD display shows Treb + "value".

Touch "SELECT" key again, Bass adjustment, third ICON on the LCD  on, press the "UP", "DOWN" arrow to adjust Bass, LCD display shows Bass + "value".

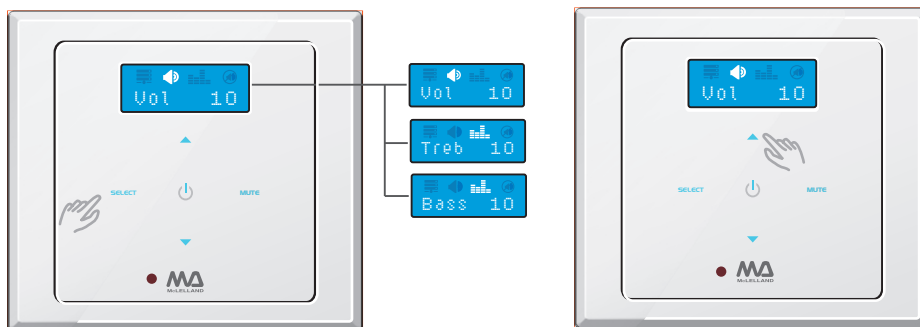

3 MUTE Key

Touch to activate mute function, fourth ICON on the LCD  on, LCD display shows MUTE. Press again, Mute deactivate, music back and LCD turns to Volume.

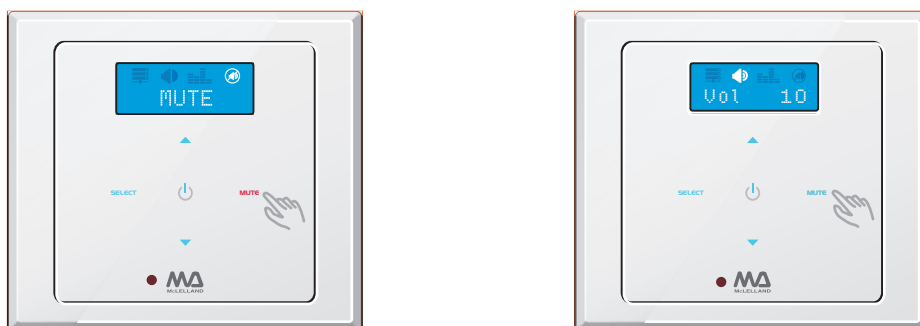

Remark: If Keypad is not being touched after 8 secs, it will switch to "Volume" page.